

revamp
REVAMP
P r o f e s s i o n a l



PROGLOSS AIRSTYLE

PROFESSIONAL 1200W AIR STYLER

User Guide

DR-1100

FEATURES

1. 32mm bristle brush
2. Rough dry concentrator
3. 25mm Perfect Finish curl release tong
4. Smooth & shape brush
5. 19mm tight curl tong
6. Attachment release button
7. Cool shot button
8. On/off & speed control
9. Temperature control
10. Airstyle handle
11. Filter



FIVE STYLING ATTACHMENTS

The ProGloss Airstyle provides 5 interchangeable styling attachments for versatile air styling:

- 32mm bristle brush for natural bounce and volume
- 25mm Perfect Finish tong for curls and waves - bristles retract for easy, flawless curls
- 19mm tight curl tong for tight to medium curls
- Rough dry concentrator for blow drying
- Smooth & shape brush

PROGLOSS™ SUPER SMOOTH OILS

Every product in the Revamp haircare range is infused with **PROGLOSS™ SUPER SMOOTH OILS** - enriched with **Argan, Keratin and Coconut** for ultimate smoothness and shine.

INSTRUCTIONS FOR USE

- Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through to de-tangle.
- Apply heat protection spray before drying.
- Plug the product into a 220-240V mains power supply.
- To quickly blast dry hair, use without a nozzle.
- To use the appliance without an attachment, turn on by using the speed switch on the handle.
- To use the Airstyle with attachments, ensure the appliance is switched off and cool. Fix the attachment onto the end of the Airstyle until it clicks in place. To remove the attachment, press the attachment release button and slide it off.
- **CAUTION:** Always allow the Airstyle to cool before adding and removing attachments.
- To rough dry hair, use the **rough dry concentrator**.
- Section the hair prior to styling. Style the lower layers first.
- For tighter curls, use the **19mm tight curl tong** or **25mm Perfect Finish curl release tong**. These are best for use on short and medium length or layered hair.
- The Perfect Finish curl release **25mm brush** tong includes retractable bristles. Use the tong as usual, then press the Perfect Endings switch - this retracts the bristles and allows you to remove the brush smoothly and effortlessly from your hair. Try the release to use it before styling the hair.
- To create medium to loose curls use the **32mm bristle brush**.
- Use the **smooth and shape brush** to add fullness to your hair, while giving a smooth finish.

- Adjust the heat and speed switches on the handle to the desired setting (higher heat and speed settings for drying and lower heat and speed settings for styling):

SPEED	
0	Off
I	Medium speed
II	High speed
HEAT	
§	Low heat
§§	Medium heat
§§§	High heat (for faster drying)

- To use the Cool Shot (feature 7) press and hold the button at the front of the airstyler. This will cool the hair and help to set the style.
- After use, switch off the styler, by switching the speed setting to 0, unplug and allow to cool before storing away.

Follow us on revamphair.com for the latest hair tips and advice.

CLEANING & MAINTENANCE

- Switch the appliance off, unplug from the mains and allow to cool fully before cleaning.
- Wipe over all surfaces using a soft damp cloth. Do not use harsh abrasives or cleaners.
- Do not immerse the appliance in water or other liquid.
- Ensure all parts are dried thoroughly with a soft towel before reusing.
- To prevent cord damage, do not wrap the cord around the appliance, always store the cord loosely next to the appliance.
- Store in a cool dry place.

Cleaning the Filter (feature 11)

- To maintain peak product performance and to prolong motor life, it is important to regularly remove dust and dirt from the rear grille and clean.
 - Open the rear-grille cover.
 - Clean with a soft brush and close rear-grille cover.
- DO NOT USE APPLIANCE WITHOUT THE FILTER IN PLACE**

IMPORTANT SAFEGUARDS


- This appliance can be used by children aged from 16 years and above. Persons with reduced physical, sensory or mental capabilities should not use this product. Persons with lack of experience and knowledge can use the product if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 16 and supervised. Keep the appliance and cable out of reach of children under 16 years.
- **WARNING:** for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- THIS APPLIANCE SHOULD BE UNPLUGGED FROM THE MAIN SUPPLY WHEN NOT IN USE.
- **WARNING:** This appliance must not be taken into a bathroom. It should not be used near bath-tubs, basins or any other vessels containing water.
- This appliance must not be used outdoors.
- Avoid allowing any part of the appliance to come into contact with the face, neck or scalp.
- In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. Ensure the inlet grille is free from obstructions such as household fluff, loose hair etc.
- **DO NOT USE APPLIANCE WITHOUT THE FILTER IN PLACE**
- Do not use the appliance while drowsy or sleeping.
- Do not leave the appliance unattended while plugged in.
- Do not set the appliance down while still on.
- Do not operate with wet hands.
- Do not place the appliance on any soft furnishings or materials e.g. carpet, bedding, towels, rugs etc.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use any extension cord with this appliance.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- If the power cord becomes damaged, discontinue use immediately and return the appliance to your nearest authorised service dealer for repair or replacement in order to avoid a hazard.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those supplied with this product.
- Do not take the appliance apart. There are no serviceable parts inside.
- Let the appliance cool down before cleaning and storing away.

TWO YEAR GUARANTEE

FKA Brands Ltd guarantees this product from defect in material and workmanship for a period of 2 years from the date of purchase, except as noted below. This FKA Brands Ltd product guarantee does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorised accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of FKA Brands Ltd. This guarantee is effective only if the product is purchased and operated in the UK / EU. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and / or authorised, or repair of products damaged by these modifications is not covered under this guarantee. FKA Brands Ltd shall not be responsible for any type of incidental, consequential or special damages.

To obtain guarantee service on your product, return the product post-paid to your local service centre along with your dated sales receipt (as proof of purchase). Upon receipt, FKA Brands Ltd will repair or replace, as appropriate, your product and return it to you, post-paid. Guarantee is solely through service centre. Service of this product by anyone other than the service centre voids the guarantee. This guarantee does not affect your statutory rights. For your local service centre, go to www.revampchair.com/servicecentres

WEEE explanation

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



SALON BRITISH BRANDS

Revamp is a trademark of Salon British Brands. Distributed by FKA Brands Limited.
Somershill Business Park, Tonbridge, Kent TN11 0GP, UK / Tel: 01473 874016
Via Giosuè Carducci 125, 20099 Sesto S. Giovanni, Milan, Italy / Tel: 0039 0236006064
csupport@revamphair.com
IB-DR1100-0120-01